

TDI International, Inc. - Chair Cylinder Maintenance

General Maintenance: Clean and Lubricate every 6 Months	
<ol style="list-style-type: none"> 1. Raise seat to the highest position. 2. Wipe clean the old lubricant from exposed piston. 3. If a cylinder cover or bellow is present, push the cover up to access piston. 4. Apply a small amount of lubricant* to the exposed piston. 5. Raise and lower the seat and rotate to distribute lubricant into the piston. 	

*Lubricant should be a high grade clear synthetic grease. All lubricants should be approved for specific controlled environments.

Trouble Shooting:	
Problem #1:	Seat moves up or down very slowly when adjusting height.
Solution:	Clean and lubricate the cylinder piston.
Problem #2:	Erratic or jerky motion when seat is moved up or down.
Solution:	Clean and lubricate the cylinder piston.
Problem #3:	Seat height does not hold position.
Solution:	Replace the cylinder piston.
Problem #4:	Seat does not raise up.
Solution:	Clean and lubricate the cylinder piston.
	If that does not solve the problem, replace the cylinder piston.

TDI International, Inc.

3351 E. Hemisphere Loop, Tucson, AZ 85706
 Phone: (520) 799-8000 / Fax: (520) 799-8002 / Email: equipment@tdiinternational.com

Jan.2012